 


Shy

 
Welcome to Shy

A new range of discreet and desirable vibrators designed to look beautiful, and satisfy a simple need.




Look Shy

Because looks can be deceiving.



Feel Shy

 Because you don't always have to know how you feel.



Play Shy

Because life doesn't always have to be taken seriously.

Getting to know Shy

Thanks for buying this Shy product. We want you to love it as much as we do. Don't forget to take out the pouch we've included under the product tray!

We've also included a battery, so you don't have to wait a moment longer to try it out. Your Shy product is ready to use.

But please read these instructions carefully before using your Shy product to avoid any injury to yourself or damage to the product.

Using your Shy product

Your Shy Product needs a CR123A lithium battery to work. You can get these in any good electrical retailer.

The battery fits into the end cap, the negative (-) point sits in the cap end.

Your Shy product is made from stainless steel so it can easily adapt to different temperatures. To warm your Shy product before use simply cup it in your hands (or someone else's) until it reaches your body temperature. Or, for something different, try putting it in the fridge for 10 minutes.

Operating your Shy product is uniquely easy. There are no ugly buttons or switches — you just need to twist the end cap, using the Shy finger divot to help loosen and tighten the cap end. Your Shy product has three different speeds: low, high and intermittent.

- Once the battery is in the cap end, twist the cap until it is fully closed. Your Shy product will turn on, set to low speed vibration.
- Twist the product to unscrew and your Shy product will turn off.
- Twist to close the cap again and your Shy product will turn on, set to high speed vibration.
- Twist the product to unscrew and your Shy product will turn off again.
- Twist to close the cap again and your Shy product it will turn on, set to intermittent vibration.
- To turn your Shy product off (whatever speed you are using) just unscrew the cap using the Shy finger divot until it stops.

Everyone is different, have fun working out which of the three levels is right for you.

Your Shy product is splashproof as long as the cap is closed tightly.

Cleaning and storage

Always clean your Shy product after use with warm water and a mild soap, making sure the cap is screwed on tight. Ensure that your Shy product is completely dry before storing it.

Safety first

- It is your responsibility to use your Shy product safely. Please use your common sense when using it intimately.
- Your Shy product is an adult toy for external use only. In purchasing it you are confirming that you are at least 18 years old and that you understand it should not be used internally.
- Try not to drop your Shy product. It might damage the surface and/or damage the product. Do not use the product if the surface is no longer smooth.
- Don't use your Shy product if it's defective — for example, if the outer surface is damaged or the batteries are corroded.
- Keep your Shy product out of the reach of children and pets. If any part of your Shy product is inadvertently swallowed please consult a doctor immediately.

We hope you enjoy your Shy product, and we would love to hear your thoughts. Drop us a line on hello@shy-uk.com

Shy product warranty

- Your Shy product warranty lasts for 1 year from the date of purchase (the "warranty period") and is in respect of defects due to faulty workmanship or materials.
- If you discover a defect within the warranty period Shy will replace the product for you at no extra charge, provided that you are able to show proof of purchase and any fault with the product is not due to misuse or a failure to follow these instructions.
- Please note we cannot accept exchanges on non-faulty products that have been opened, i.e. the plastic wrapper has been opened.
- Nothing in this User Guide affects your statutory rights.

Other stuff you need to know about your Shy product

- Your Shy product consists of two parts, the end cap and the main housing unit.
- It is made of high quality stainless steel and is therefore non toxic.
- The products are splash proof (but only if you make sure the top is tightly closed with the rubber water seal in place and the rubber o-ring correctly positioned and undamaged, fitted in the end cap).
- Battery: CR123A lithium battery.

For external use only

All designs, images and text are copyright to Shy Ltd. The Shy logo is a trademark of Shy Ltd. All rights reserved.

Shy really cares about the environment. If for any reason you are disposing of your product please make sure you recycle in accordance with your local guidelines. If you are unsure what to do please drop us a line and we will help out.

Shy products are crafted with love and passion in the UK. www.shy-uk.com

